


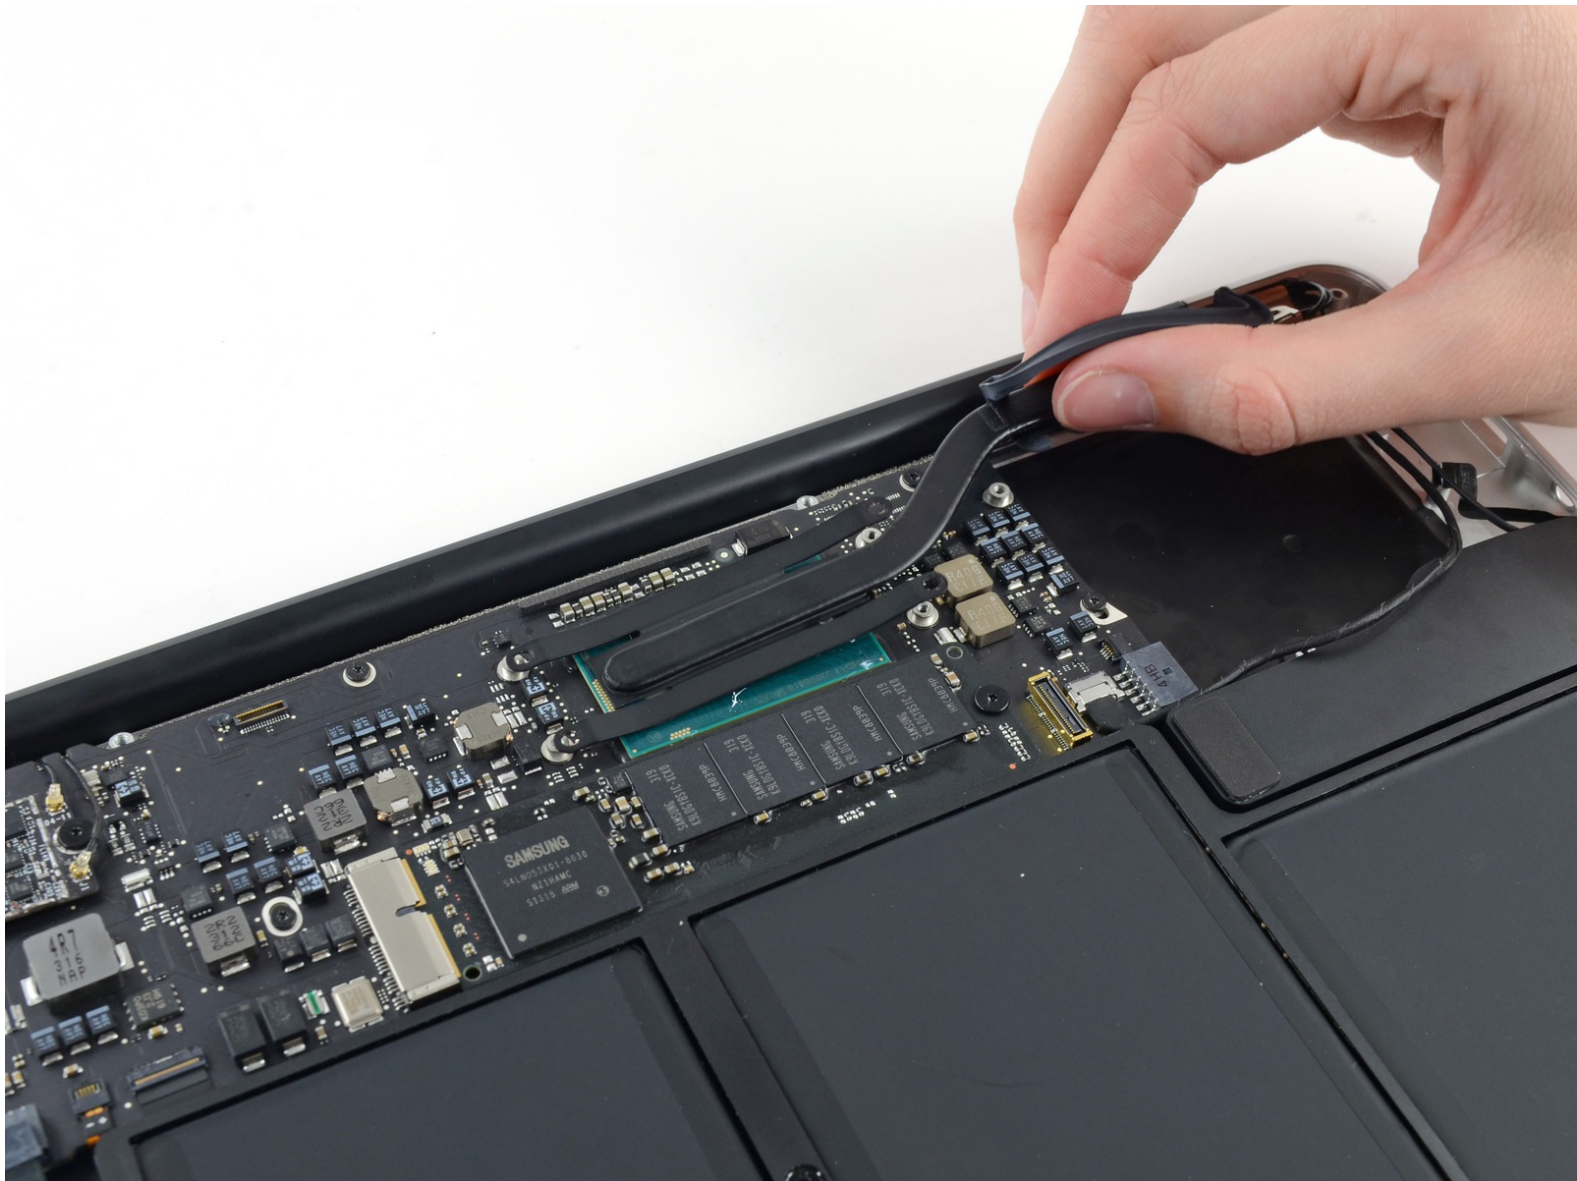

MacBook Air 13" Mid 2013 Heat Sink Replacement

Replace the Heat Sink in your MacBook Air 13" Mid 2013.

Written By: Walter Galan



INTRODUCTION

Use this guide to replace the heat sink.

Be sure to [apply a new layer of thermal paste](#) before reinstalling your heat sink.



TOOLS:

- [P5 Pentalobe Screwdriver Retina MacBook Pro and Air](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [T8 Torx Screwdriver](#) (1)
- [Arctic Silver Thermal Paste](#) (1)
- [Arctic Silver ArctiClean](#) (1)



PARTS:

- [MacBook Air 13" \(Mid 2013\) Heat Sink](#) (1)

Step 1 — Lower Case




- **Before proceeding, power down your machine. Close the display and lay it on a soft surface top-side down.**
- Remove the following ten screws:
 - Two 9 mm P5 Pentalobe screws
 - Eight 2.6 mm P5 Pentalobe screws
- The special screwdriver needed to remove the ten 5-point Pentalobe screws can be found [here](#).



Step 2




- Wedge your fingers between the display and the lower case and pull upward to pop the lower case off the Air.
- Remove the lower case and set it aside.

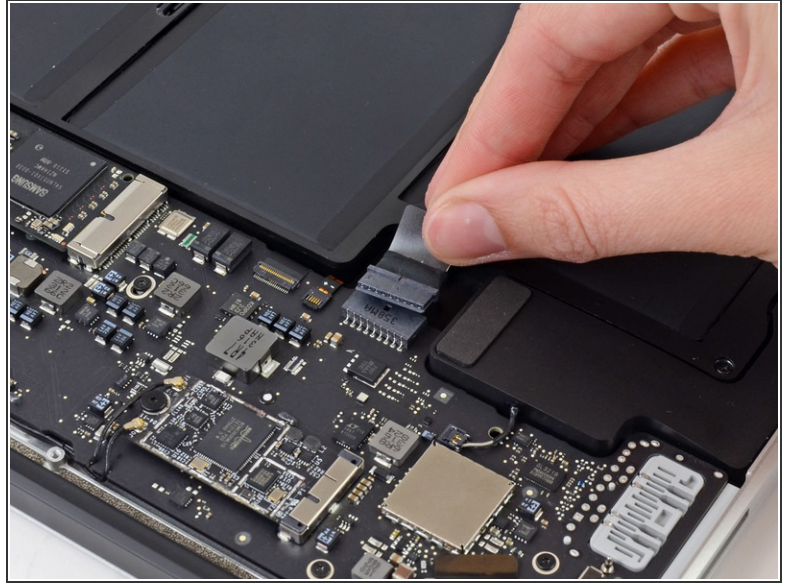Step 3 — Battery Connector



-  To ensure that everything is de-energized and won't turn on while you're working, it is recommended that you disconnect the battery.
- Grab the clear plastic pull tab attached to the battery connector and pull it toward the front edge of the Air to disconnect the battery from the logic board.
-  Do not lift upward on the connector as you disconnect it.

Step 4 — I/O Board Cable

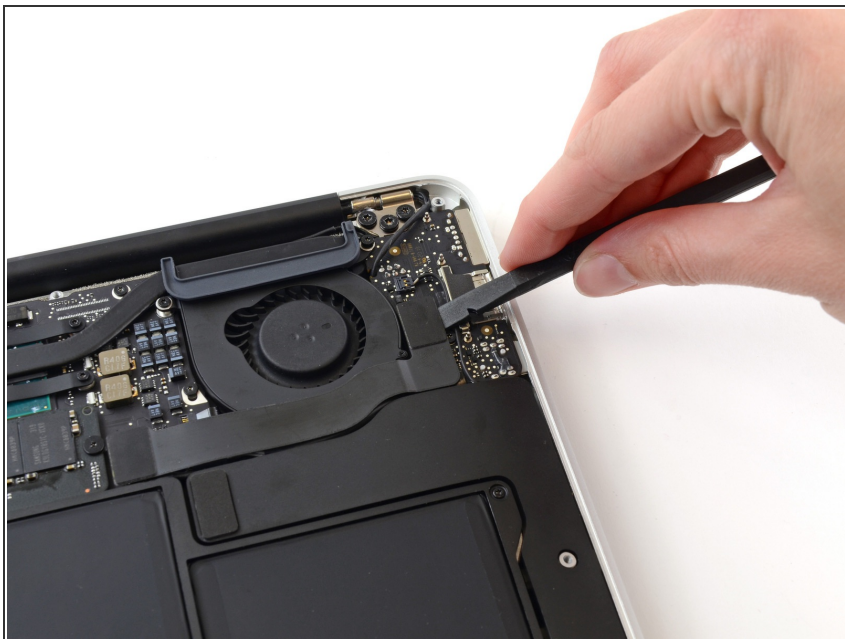

- Use the flat end of a spudger to pry the I/O board cable connector up out of its socket on the I/O board.


Step 5



- Carefully peel the I/O board cable from the adhesive securing it to the top of the fan.

Step 6




 The following connector has an especially deep socket. Use care when disconnecting it.

- While gently pulling the I/O board cable upward near its connection to the logic board, use the flat end of a spudger to pry up on alternating sides of the connector to help "walk" it out of its socket.
- Remove the I/O board cable.


Step 7 — Fan



- Use the tip of a spudger to carefully flip up the retaining flap on the fan cable ZIF socket.

 Be sure you are prying up on the hinged retaining flap, **not** the socket itself.

Step 8

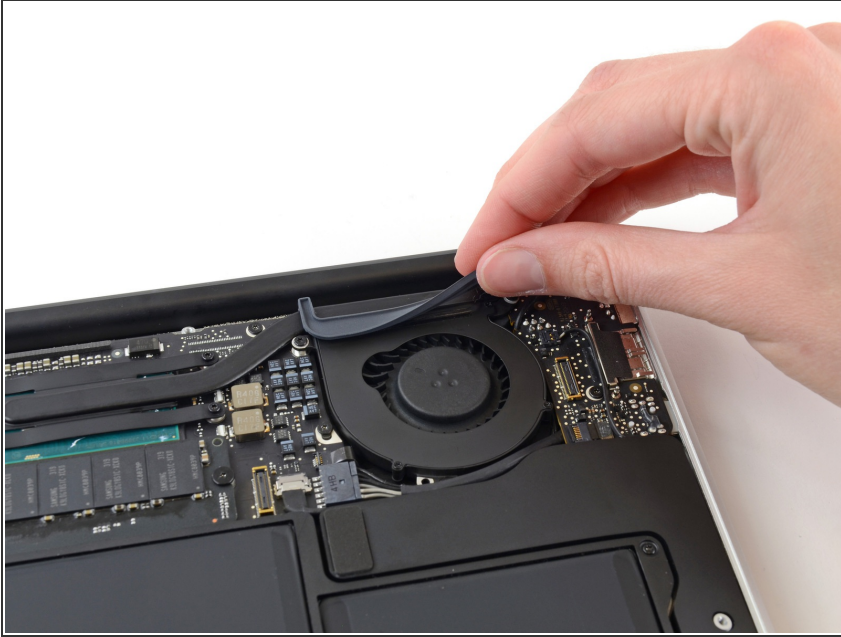


- Peel the rubber gasket off the adhesive on the top of the fan.

Step 9



- Remove the following three screws securing the fan to the upper case:
 - One 3.6 mm T5 Torx screw
 - One 2.7 mm T5 Torx screw
 - One 3.6 mm T5 Torx screw with a short head

Step 10

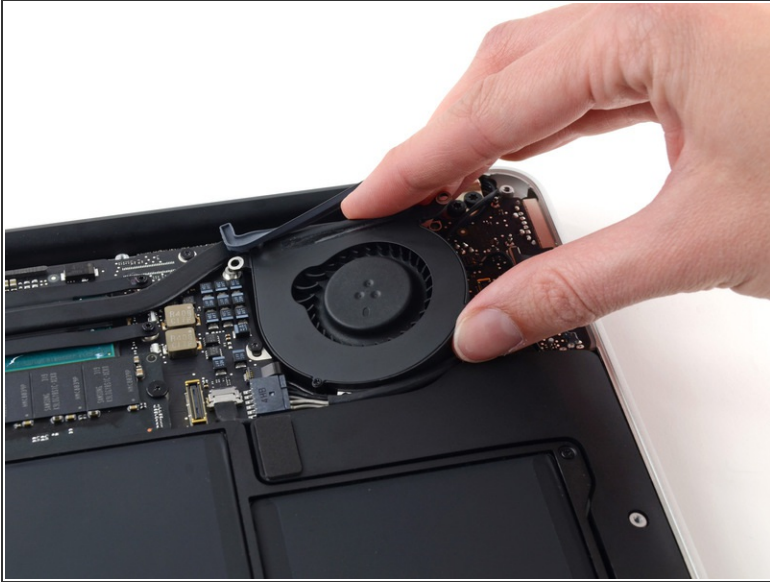


- Lift the fan from the I/O board side and pull it free from the upper case.
- Removing the fan will also disconnect the fan ribbon cable. Be careful not to snag it.

Step 11 — I/O Board



- Disconnect the I/O board by pulling its power cable away from its socket on the logic board.
- ⓘ Pull the cable parallel to the face of the logic board toward the right edge of the Air.

Step 12

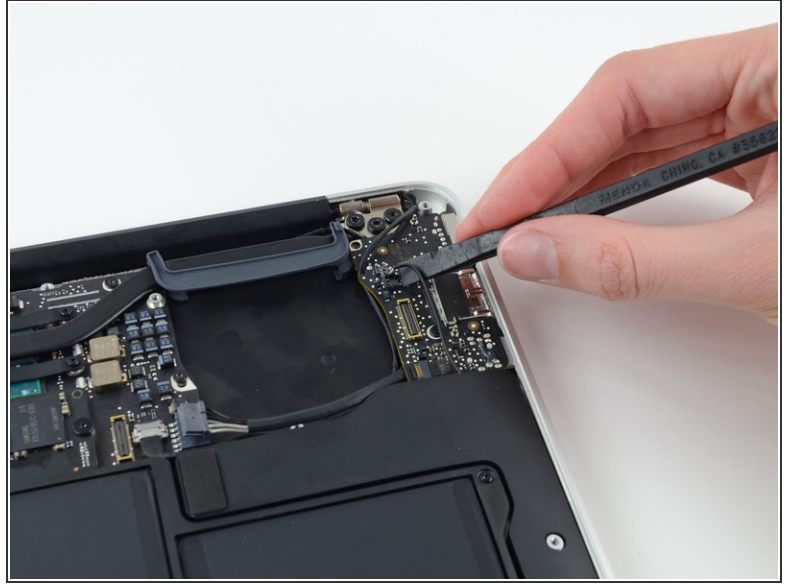

- Use the flat end of a spudger to pry the left speaker cable connector up and out of its socket on the I/O board.

ⓘ Pry up from beneath the wires.


Step 13



- Use the tip of a spudger to carefully flip up the retaining flap on the microphone ribbon cable ZIF socket.

⚠ Make sure you are flipping up the retaining flap, **not** the socket itself.

Step 14

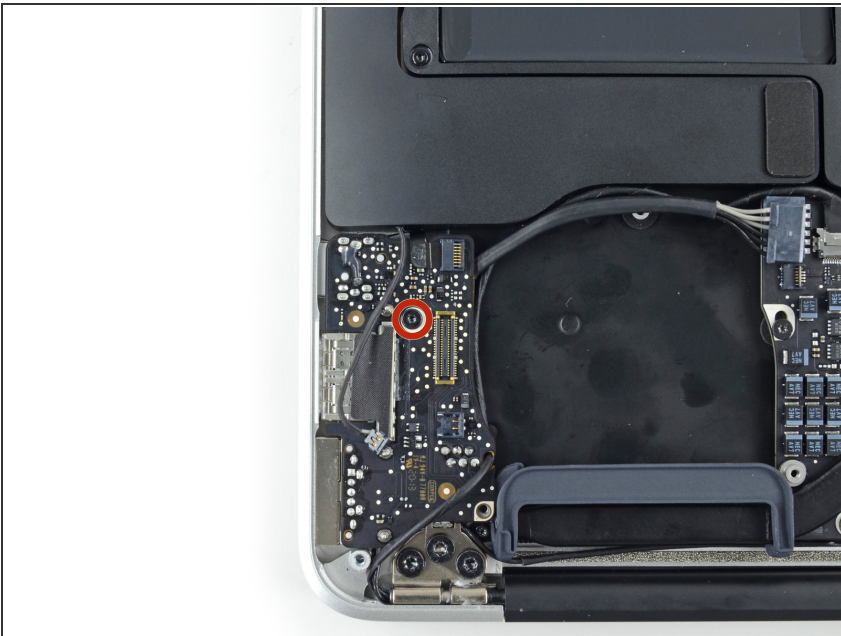

- Remove the single 3.6 mm T5 Torx screw securing the I/O board to the upper case.

Step 15



- Gently de-route the camera cable from its notch on the I/O board and push it out of the way with the tip of a spudger.

Step 16



- Lift the I/O board from the logic board side and pull it free from the upper case.
- Removing the I/O board will also disconnect the microphone ribbon cable. Be careful not to snag it.

Step 17 — Heat Sink




- Remove the two 4.9 mm T8 Torx screws securing the antenna cable retainer on the left display hinge to the upper case.

Step 18





- Push the antenna cable retainer out of the way and remove the single 3 mm T5 Torx screw securing the end of the heat sink to the upper case.

Step 19

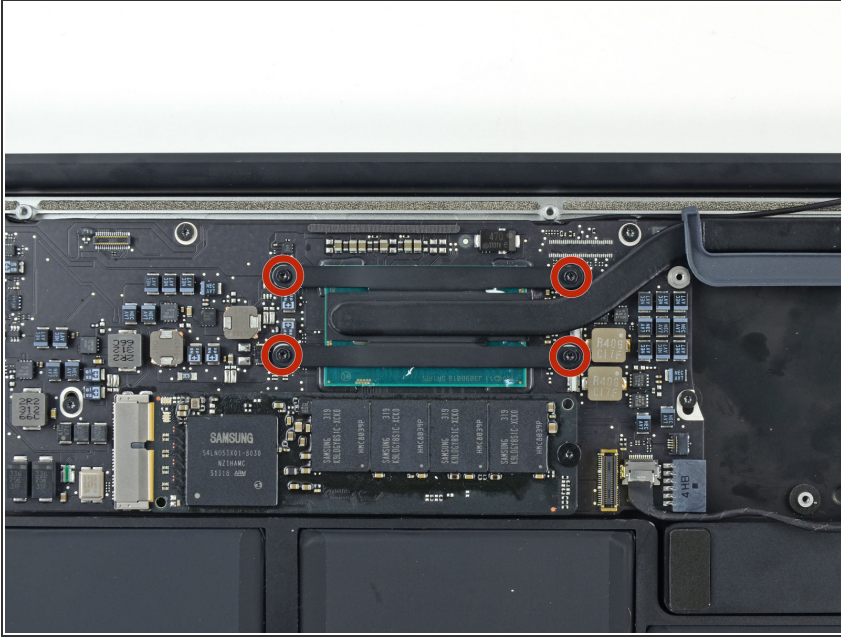

- Remove the four 2.5 mm T5 Torx screws securing the heat sink to the logic board.

Step 20

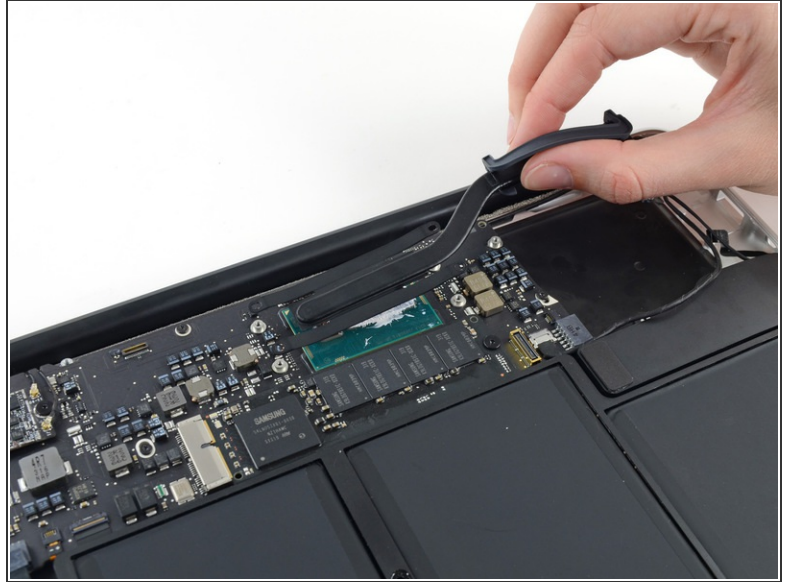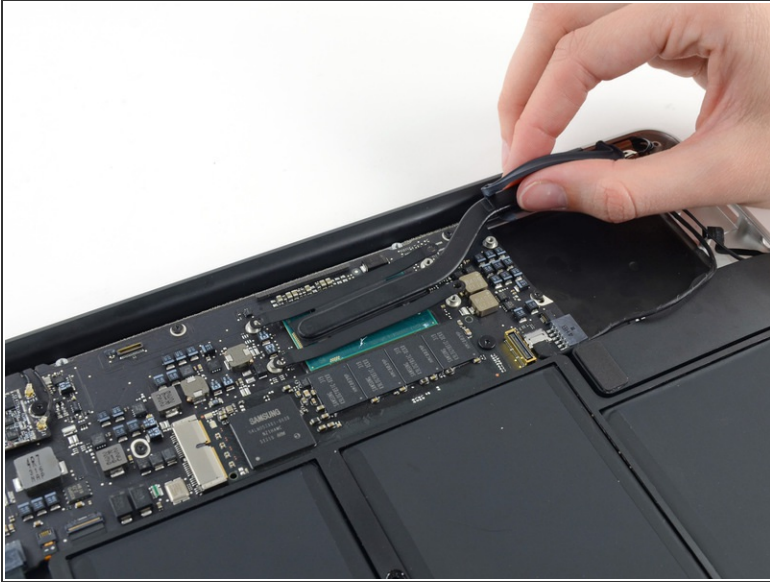

- ⓘ If the heat sink seems to be stuck to the logic board after removing all five screws, use a spudger to carefully separate the heat sink from the faces of the CPU and GPU.
- Remove the heat sink from the logic board.
- ⚠ When reinstalling the heat sink, be sure to apply a new layer of [thermal paste](#). If you have never applied thermal paste before, we have a [guide](#) that makes it easy.

Step 21



- ★ When reassembling your device, attach the gasket to the heat sink as shown.
- ⓘ The tail of the gasket should fit into the notch in the heat sink, it should not end up underneath the heat sink tab that will rest on the logic board.
- ⓘ Be sure the small post molded into the rubber gasket mates with the hole cut into the upper right corner of the logic board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 09:12:22 PM.